


## Wall Mounting Instructions for your Hinged-Framed Ketubah

Please Note: Smaller sized hinged frames do not require Wood Z-Bars. Please proceed to Step 3 if a Z-Bar is not included with your frame.


### Step 1:

Mount Wood Z-Bar to the wall at desired height. Use level. Mark and drill holes. Secure using wall anchors and screws provided.

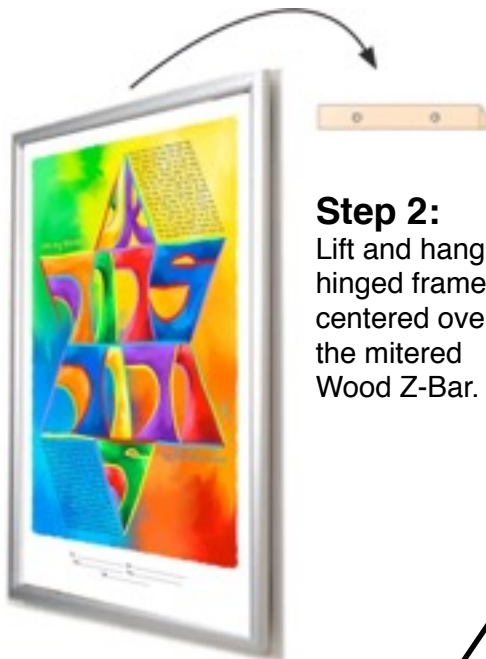

### Step 2:

Lift and hang hinged frame centered over the mitered Wood Z-Bar.

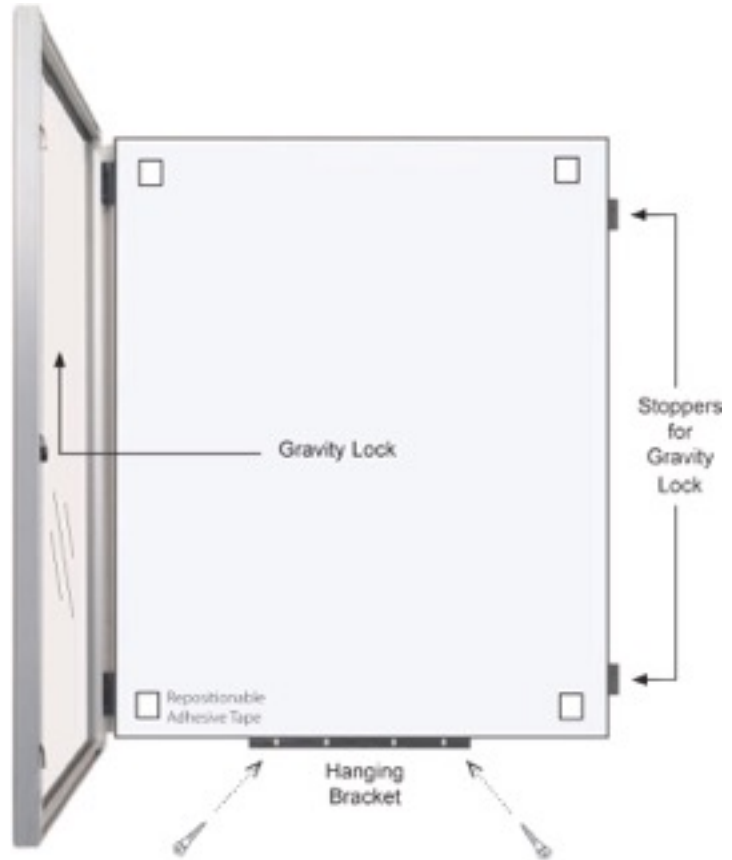

Tools required: Level, pencil, drill, Phillips head screwdriver.

### Step 3:

Open hinged frame door by lifting Gravity Lock. Next mark bottom and top of Hanging Bracket Holes with pencil. Close door of frame. While closing, lift Gravity Lock with finger and release over Stoppers to secure in locked position. Remove hinge frame from wall.

### Step 4:

Use wall anchors where necessary. Drill holes into the wall (where marked with pencil) and insert wall anchors.

### Step 5:

Place hinged frame over Wood Z-Bar again. Slide Gravity Lock up with your finger and open frame door.

### Step 6:

Insert two screws through the Hanging Bracket and secure into wall anchors. Tighten with Phillips head screwdriver. To close door, slide Gravity Lock up, and release to catch Stoppers and secure the hinge frame door.